

Electronic Lock Instructions



GSP LOCK With GSP Keypad

Battery is located in the slide drawer in the bottom of the keypad. Install an Energizer Alkaline 9 Volt battery in the lock.

CHANGING THE COMBINATION

FACTORY Set Combination: 1 - 2 - 3 - 4 - 5 - 6

We recommend that you change your combination before you begin using your new gun safe. It is a simple process but must be executed exactly. First, select a six- (6) digit combination that you can easily remember and then follow the instructions below:

1. Enter your existing combination and open the door, with the locking bolts extended. **THE DOOR SHOULD ALWAYS BE OPEN WHEN YOU ARE CHANGING COMBINATIONS.**
2. Enter in six- (6) zeros. This will put you in the programming mode. (You will hear a double beep)
3. Enter in your existing six- (6) digit combination. (You will hear a double beep)
4. Enter your new six- (6) digit combination. (You will hear a double beep)
5. Enter your new six- (6) digit combination again. (You will hear a double beep)
6. Wait approximately 10 seconds, and then enter your new combination.
7. If the procedure was executed properly, you will be able to rotate the handle.
8. If the gun safe will not open, the procedure was incorrectly executed and the combination is still your existing combination in Step 3. Leave the door open and begin with Step 2.

*** If the door will not open after entering your combination or makes several beeps after entering the code, it is usually time for a battery change. A low battery is indicated by a yellow light (see above instructions).**



LP LOCK

With LP Keypad

Battery is located in the slide up drawer in the bottom of the keypad. Install an Energizer Alkaline 9 Volt battery in the lock.

CHANGING THE COMBINATION **FACTORY Set Combination:** 1 - 2 - 3 - 4 - 5 - 6

We recommend that you change your combination before you begin using your new gun safe. It is a simple process but must be executed exactly. First, select a six- (6) digit combination that you can easily remember and then follow the instructions below:

1. Enter your existing combination and open the door, with the locking bolts extended. **THE DOOR SHOULD ALWAYS BE OPEN WHEN YOU ARE CHANGING COMBINATIONS.**
2. Hold down 0 until you hear a double beep. This will put you in the programming mode.
3. Enter in your existing six- (6) digit combination. (You will hear a double beep)
4. Enter your new six- (6) digit combination. (You will hear a double beep)
5. Enter your new six- (6) digit combination again. (You will hear a double beep)
6. Wait approximately 10 seconds, and then enter your new combination.
7. If the procedure was executed properly, you will be able to rotate the handle.
8. If the gun safe will not open, the procedure was incorrectly executed and the combination is still your existing combination in Step 3. Leave the door open and begin with Step 2.

*** If the door will not open after entering your combination or makes several beeps after entering the code, it is usually time for a battery change. A low battery is indicated by repeated beeping after code is entered (see above instructions).**



Kaba Mas (LG)

Battery is located behind the keypad. Cup hand under the keypad and lift up to install an **Energizer Alkaline 9 Volt battery.**

CHANGING THE COMBINATION **FACTORY Set Combination:** 1 - 2 - 3 - 4 - 5 - 6

We recommend that you change your combination before you begin using your new gun safe. It is a simple process but must be executed exactly. First, select a six- (6) digit combination that you can easily remember and then follow the instructions below:

1. Enter your existing combination and open the door, with the locking bolts extended. **THE DOOR SHOULD ALWAYS BE OPEN WHEN YOU ARE CHANGING COMBINATIONS.**
2. Enter in six- (6) zeros. This will put you in the programming mode. (You will hear a double beep)
3. Enter in your existing six- (6) digit combination. (You will hear a double beep)
4. Enter your new six- (6) digit combination. (You will hear a double beep)
5. Enter your new six- (6) digit combination again. (You will hear a double beep)
6. Wait approximately 10 seconds, and then enter your new combination.
7. If the procedure was executed properly, you will be able to rotate the handle.
8. If the gun safe will not open, the procedure was incorrectly executed and the combination is still your existing combination in Step 3. Leave the door open and begin with Step 2.

*** If the door will not open after entering your combination or makes several beeps after entering the code, it is usually time for a battery change. A low battery is indicated by repeated beeping after code is entered (see above instructions).**