



Owners Manual


ATTENTION !!

PLEASE READ FIRST


The information in the following pages is important and must be read in full and understood completely.


Please read first the steps in each section, then perform each step.



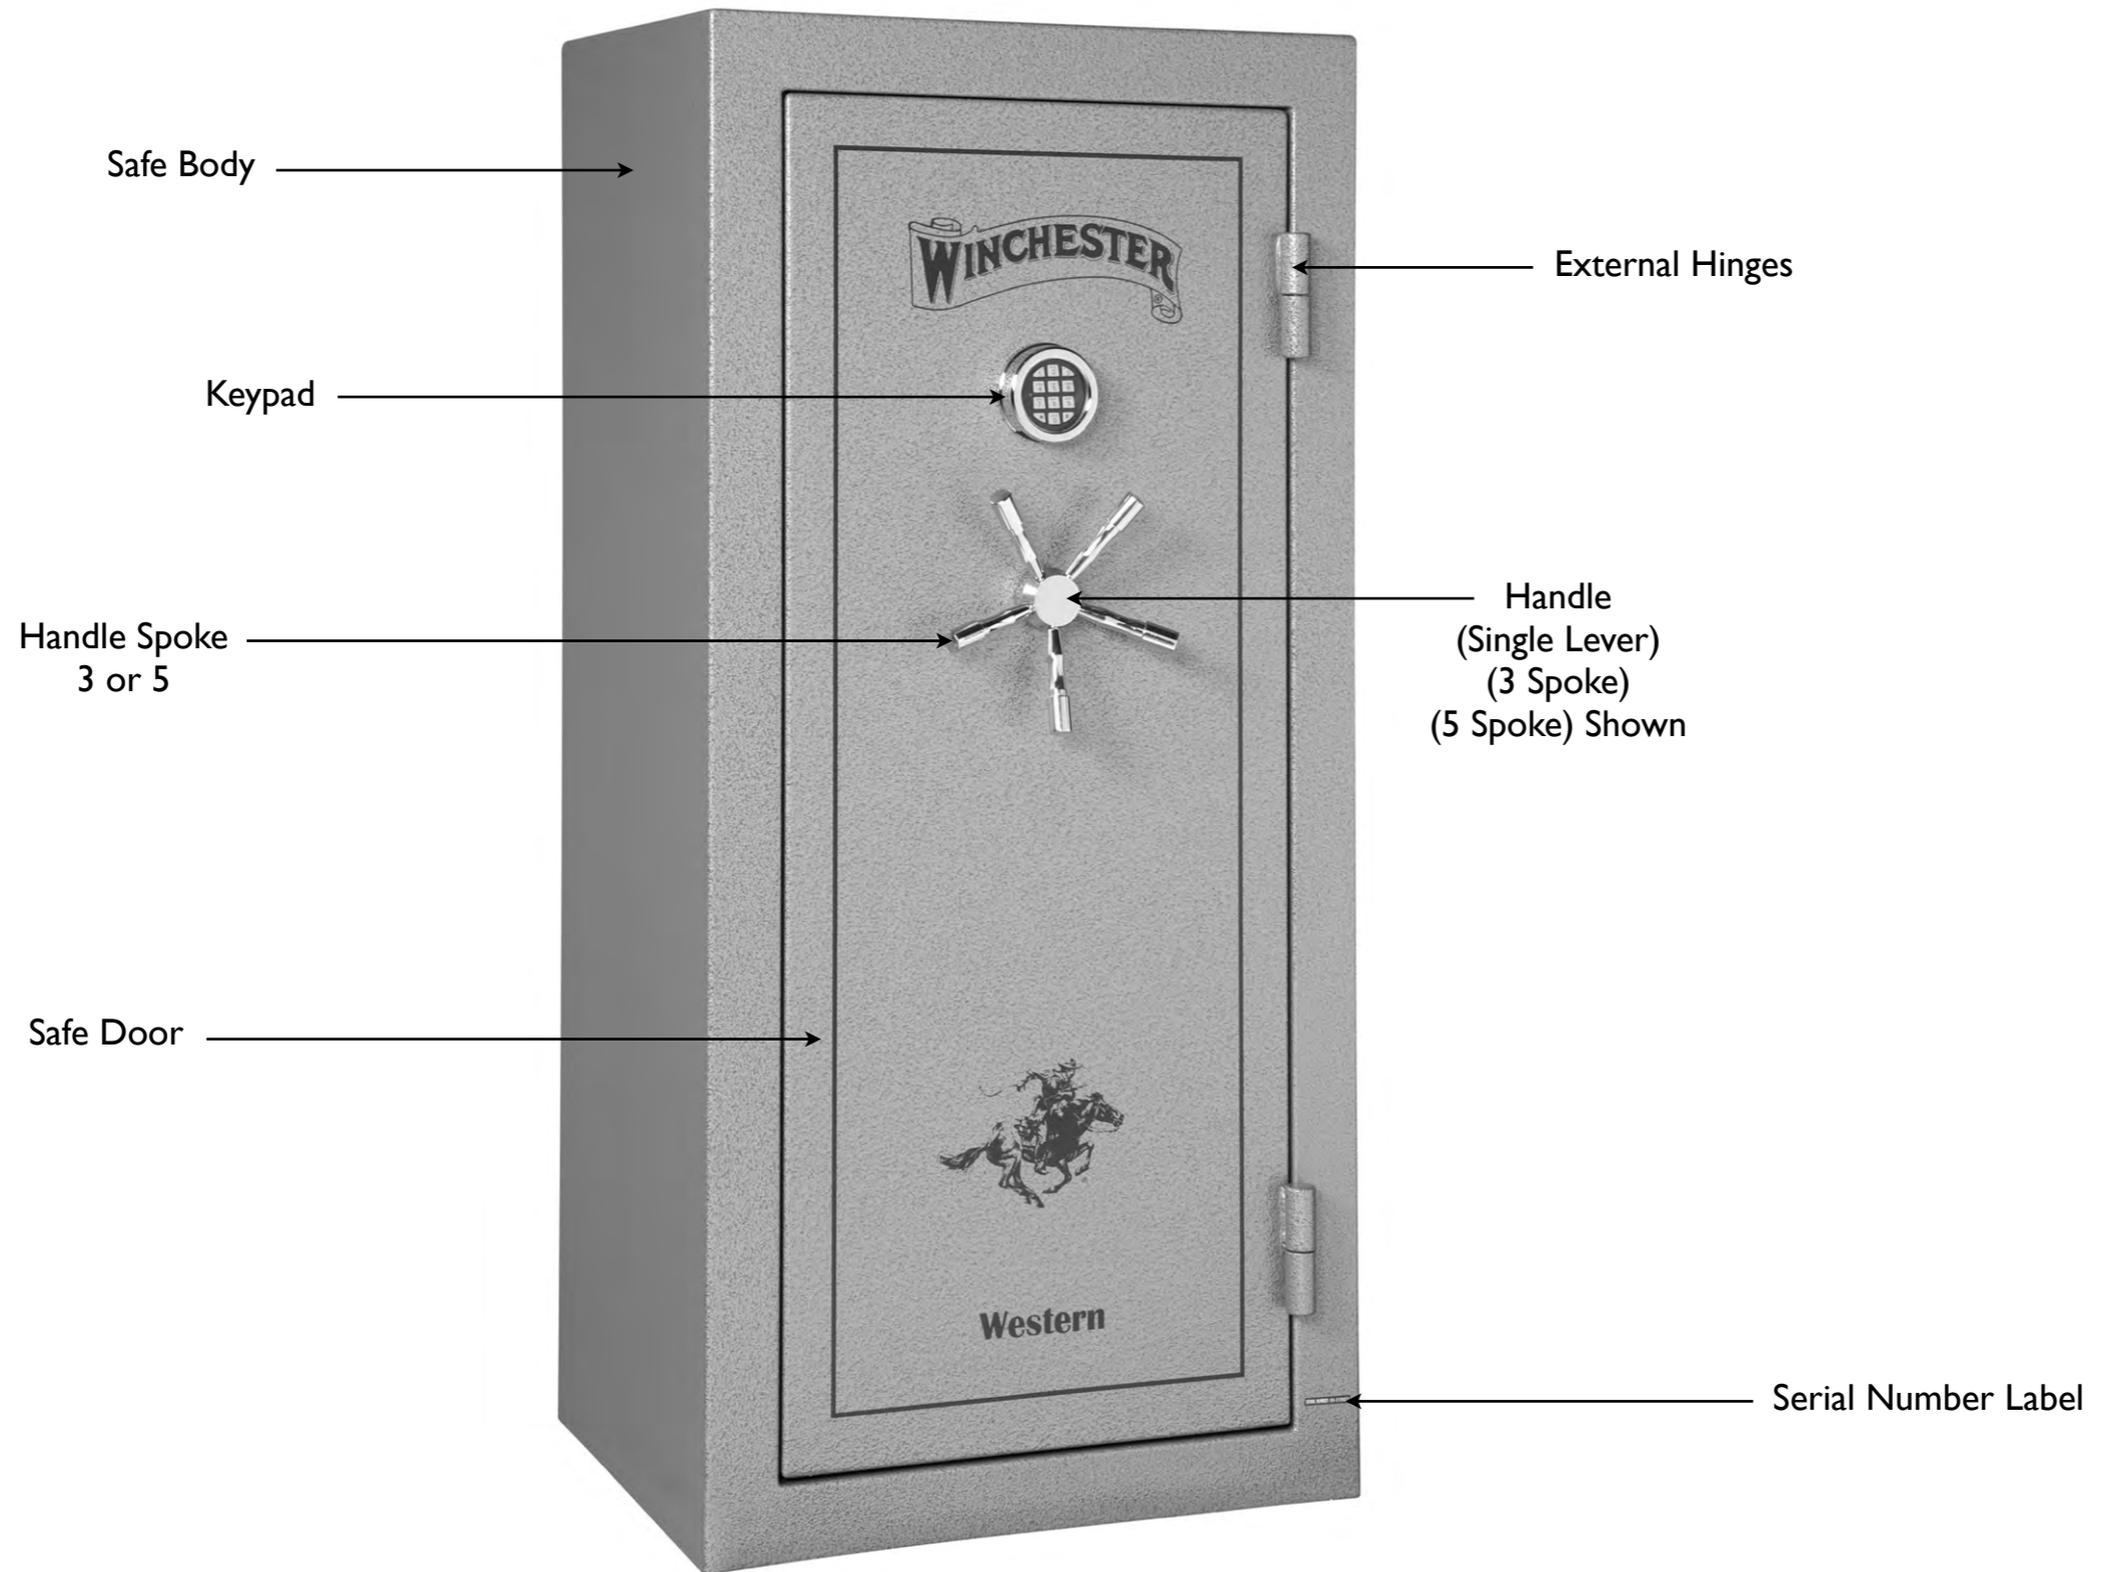

Size of safe may vary

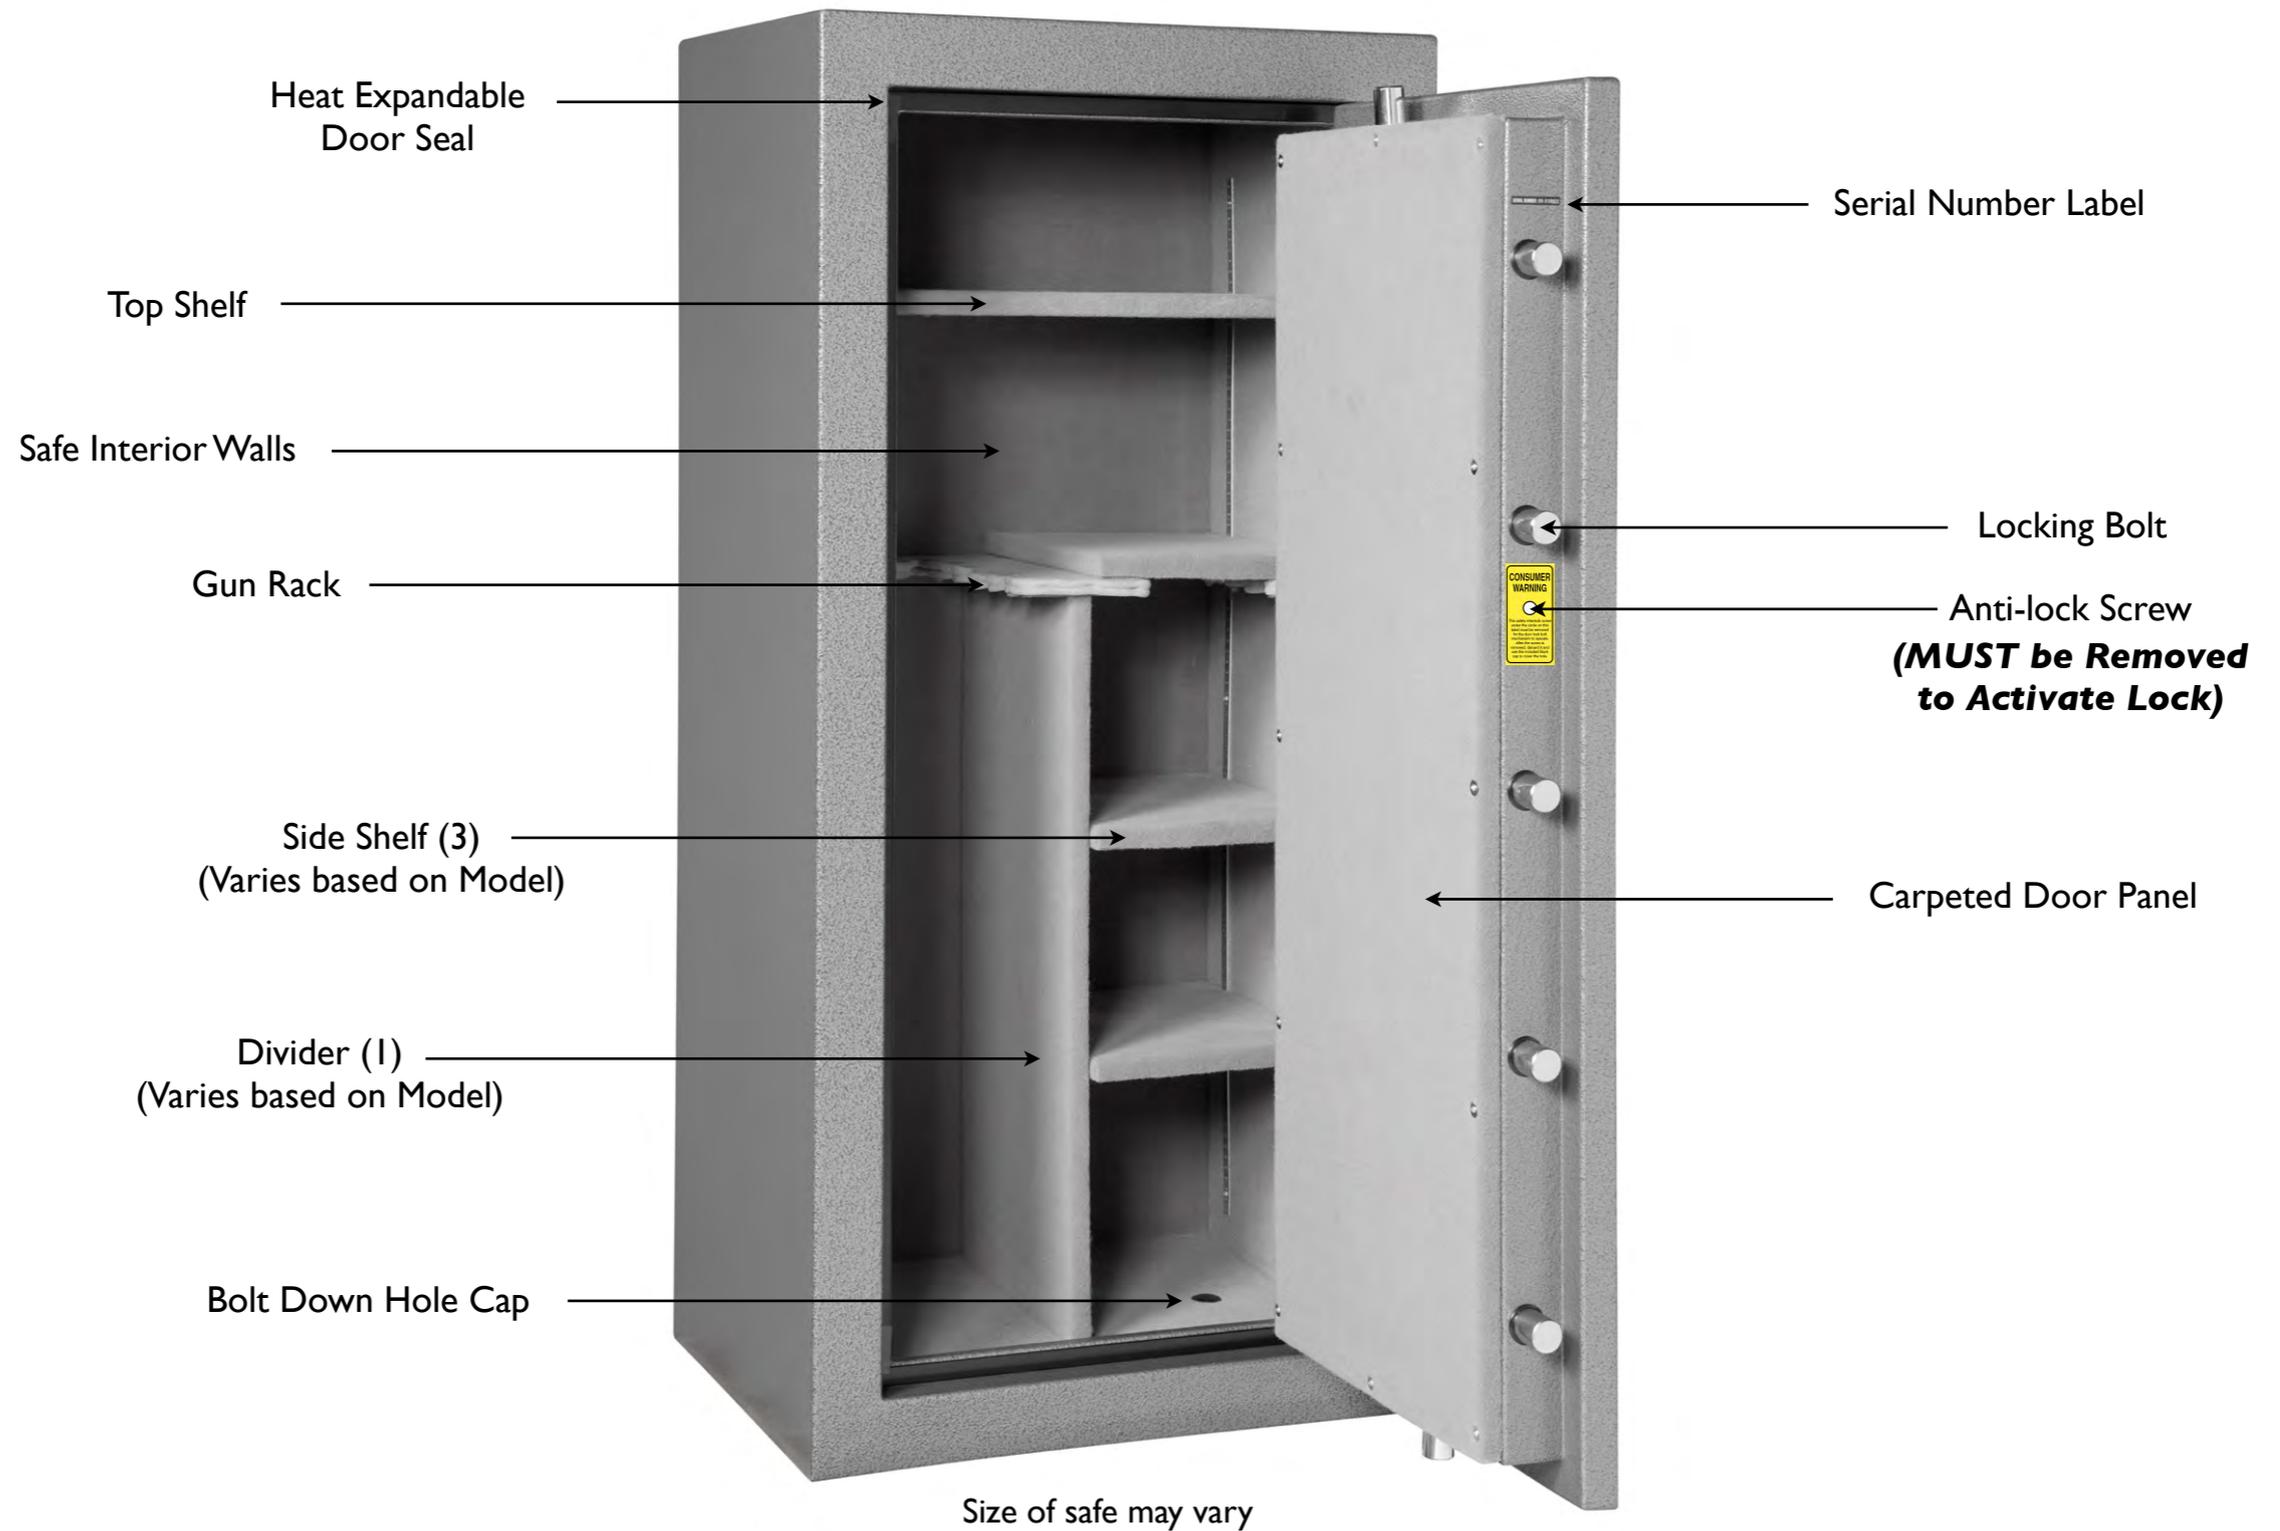


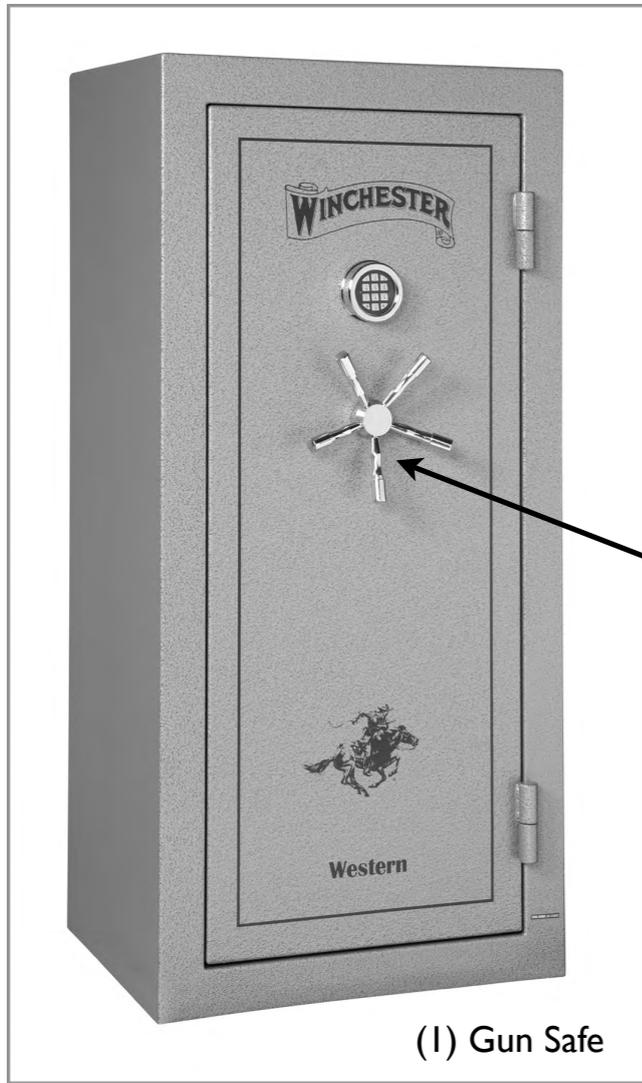


Packet attached to handle contains:



(1) 9V Alkaline Battery

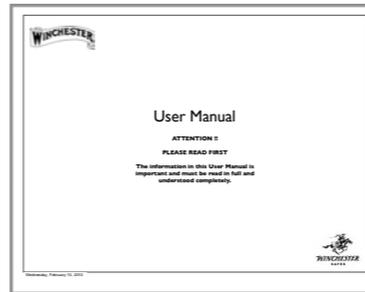

(1) User Manual

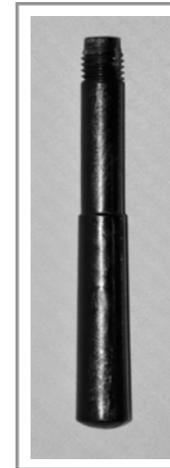

(1) Temporary Spoke
(Not included w/ Single Lever Handle)




(1) Allen Wrench


ONLY safes with Anti-lock Device



(1) Plastic Hole Plug

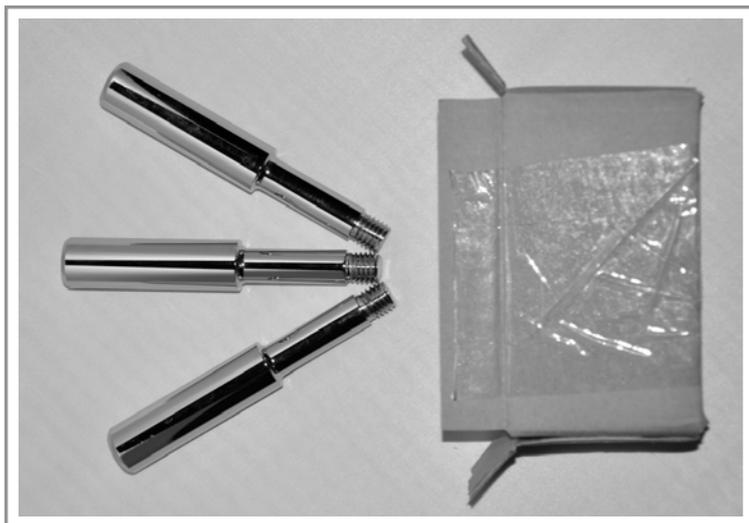

Handle Spokes
3 or 5
(Inside safe)

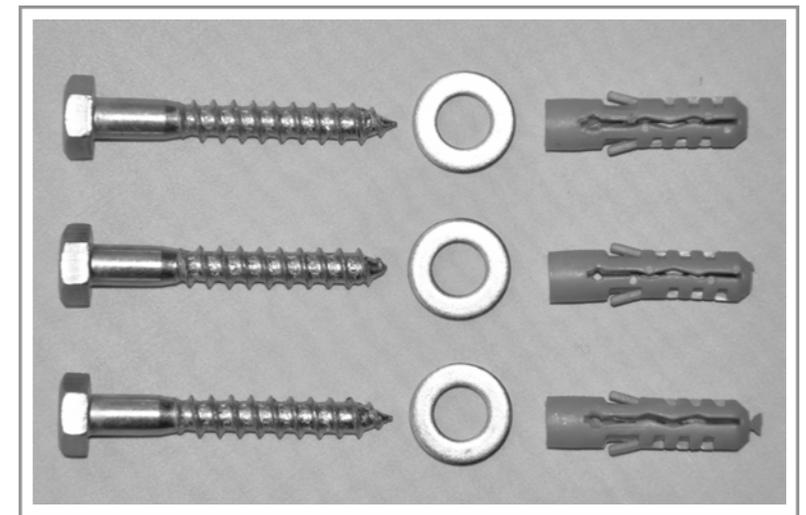

(1) Bolt Down Kit
Concrete / Wood
(Inside safe)

DO NOT Remove the Keypad from the Door !!

LP



(1) 9V Alkaline Battery

Step 1

Locate the battery.

Step 3

Gently insert the battery up inside the keypad and slide the door closed.



Bottom of Keypad
(Slide Battery Door - Closed)



Bottom of Keypad
(Slide Battery Door - Open)

Step 2

Slide the door open and connect the battery to the wire connection.

DO NOT Remove the Keypad from the Door !!

LA GARD



(1) 9V Alkaline Battery

Step 1

Locate the battery.

Step 3

Gently insert the battery up inside the keypad and replace the battery cover.



Bottom of Keypad
(Remove screw)

Step 2

Remove the Phillips head screw from the battery cover located on the bottom of the keypad.

Step 4

Re-install the Phillips head screw in the battery cover.
DO NOT OVER TIGHTEN !




IMPORTANT !!

The temporary spoke provided is used to assist in opening the safe for the first time **ONLY !**

Step 1

Locate the temporary spoke.

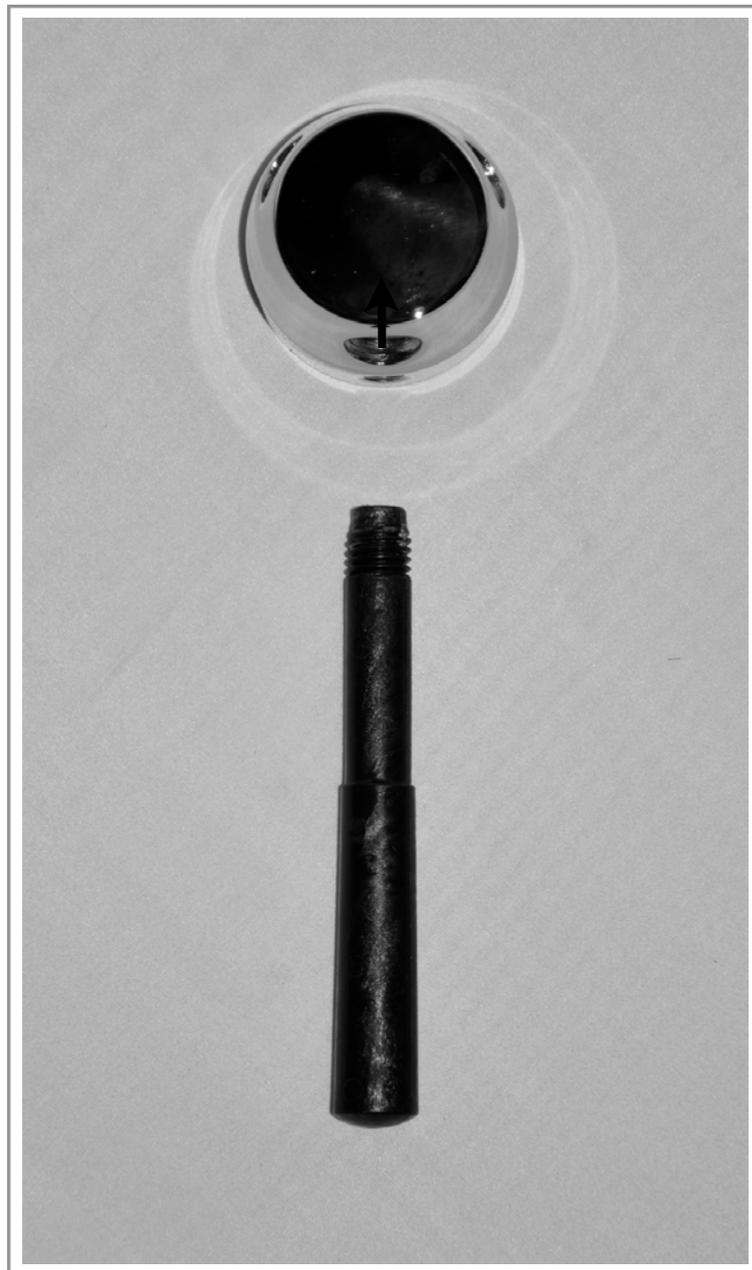

Step 2

Screw in the temporary spoke at the bottom of the handle hub.



Step 1

Enter the factory pre-set code of:

1 - 2 - 3 - 4 - 5 - 6



Note !!

A beep will be heard after each number is pressed. A double beep will confirm the correct code entry.


Step 2

After entering in the factory code, a double beep will be heard. Then grasp the handle (as shown) and gently rotate clockwise within 4 seconds.



Correct


CAUTION !!

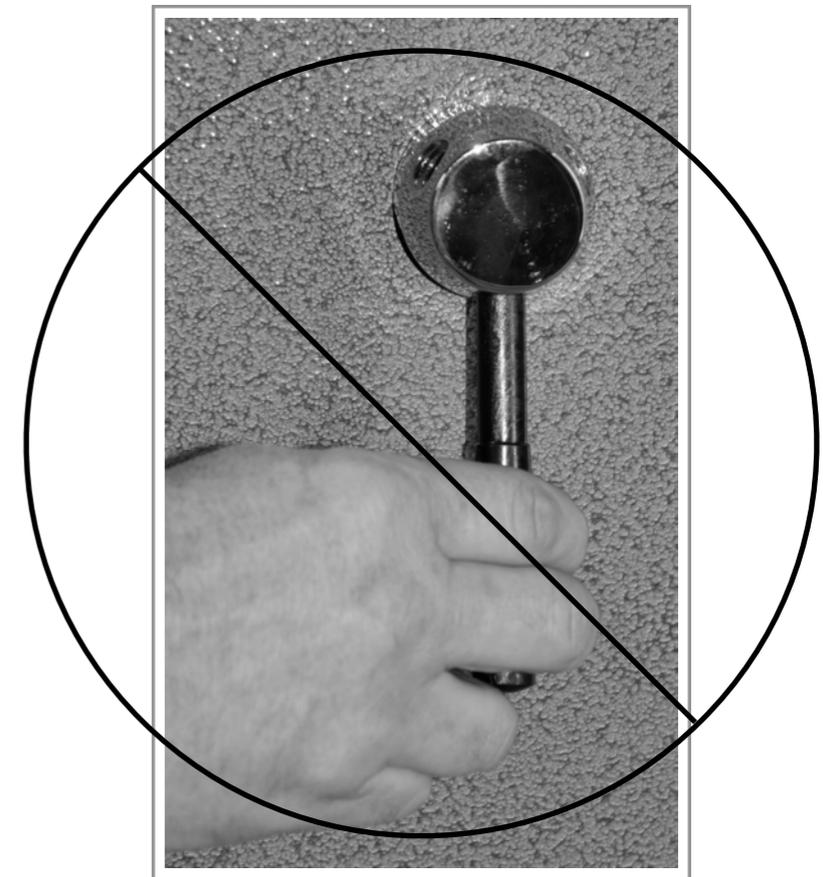

Incorrect

Step 1

Remove and discard the temporary spoke.

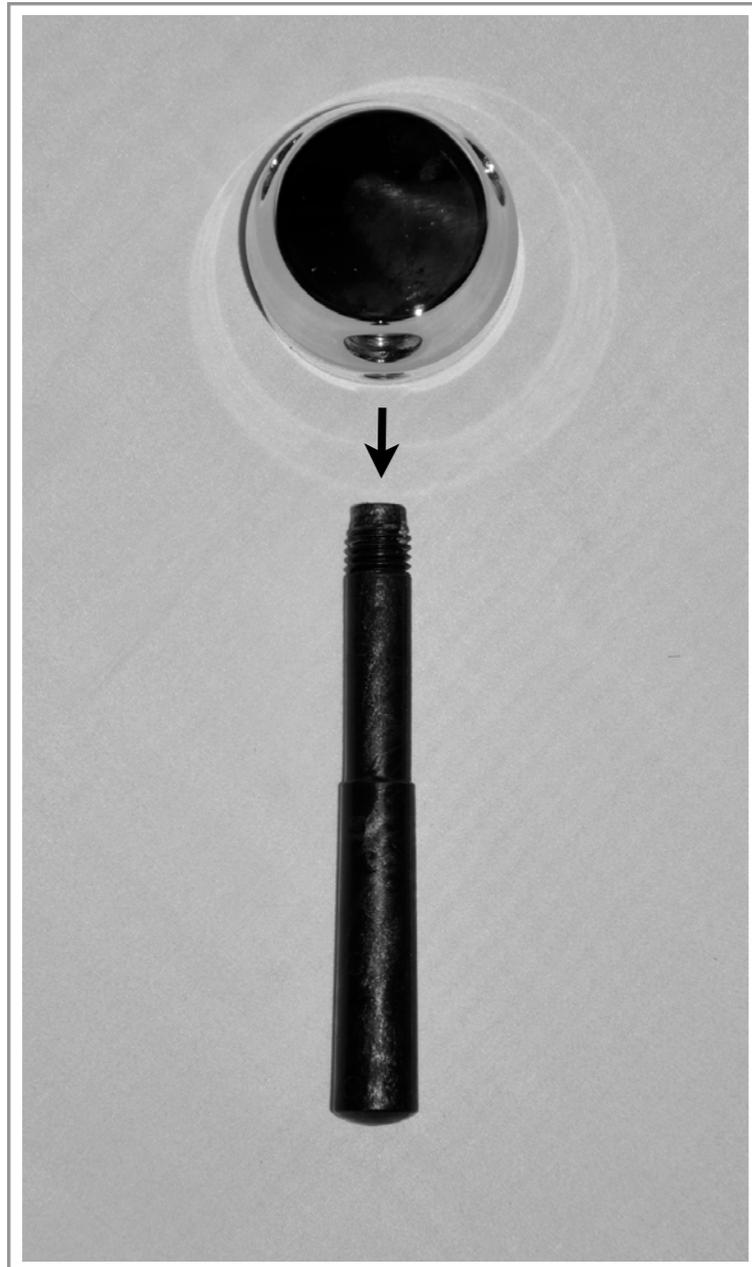


Step 2

Remove the box of spokes from the inside of the safe. Unpack and screw in each spoke into the handle hub.



3 Spoke Handle Shown

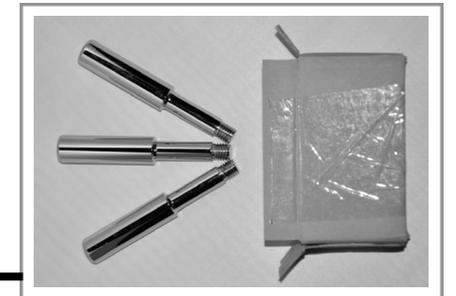

Handle Spokes
3 or 5 (Inside safe)


Consumer ALERT !!

Your safe may have a “Anti-lock” device installed. This device is to prohibit the lock from locking and it needs to be removed so the safe operates properly.

This device is used for “Retail” display ONLY !!



Anti-lock Screw

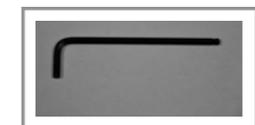

(1) Allen Wrench



(1) Plastic Hole Plug

Device Removal !!

Remove the screw with the provided allen wrench under the label and plug the hole with the provided plastic hole plug.

Lp**Step 1**

Enter the factory pre-set
code of:
1 - 2 - 3 - 4 - 5 - 6
and open the door.

Step 2**Programing****IMPORTANT !!**

The following must be done with the door in the open position with your locking bolts extended.

Please NOTE: Between each step you have 4 seconds to proceed to the next step.

1. PRESS and hold the 0 until you hear a double beep (The RED light will come ON and remain ON)
2. Enter in the factory pre-set code of 1 - 2 - 3 - 4 - 5 -6 (You will then hear a double beep)
3. Enter in your own personal 6 digit code. (You will then hear a double beep)
4. Enter in your personal 6 digit code - AGAIN (You will then hear a double beep)
5. The RED light will go out.

**Step 3****Code Verification****IMPORTANT !!**

The following must be done with the door in the open position with your locking bolts extended.

NOTE: If programming was done incorrectly, the code will remain 1 - 2 - 3 - 4 - 5 - 6

1. Enter in your personal 6 digit code (You will hear a double beep)
2. Entering in the wrong code will result in a long solid beep
3. Entering in the wrong code 4 times will result in the keypad shutting down for a 5 minute period. The battery must remain connected. Removing the battery WILL NOT over-ride the shutdown period.

LA GARD**Step 1**

Enter the factory pre-set
code of:
1 - 2 - 3 - 4 - 5 - 6
and open the door.

Step 2**Programing****IMPORTANT !!**

The following must be done with the door in the open position with your locking bolts extended

Please NOTE: Between each step you have 4 seconds to proceed to the next step.

1. Enter in 0 - 0 - 0 - 0 - 0 - 0 until you hear a double beep
2. Enter in the factory pre-set code of 1 - 2 - 3 - 4 - 5 - 6
(You will then hear a double beep)
3. Enter in your own personal 6 digit code.
(You will then hear a double beep)
4. Enter in your personal 6 digit code - AGAIN
(You will then hear a double beep)

**Step 3****Code Verification****IMPORTANT !!**


The following must be done with the door in the open position with your locking bolts extended

NOTE: If programming was done incorrectly, the code will remain 1 - 2 - 3 - 4 - 5 - 6

1. Enter in your personal 6 digit code.
(You will hear a double beep)
2. Entering in the wrong code will result in 3 beeps.
3. Entering in the wrong code 4 times will result in the keypad shutting down for a 5 minute period. The battery must remain connected. Removing the battery WILL NOT over-ride the shutdown period.

Step 1

Locate the 3 black plastic caps on the inside carpeted base of the interior and remove them and set aside.

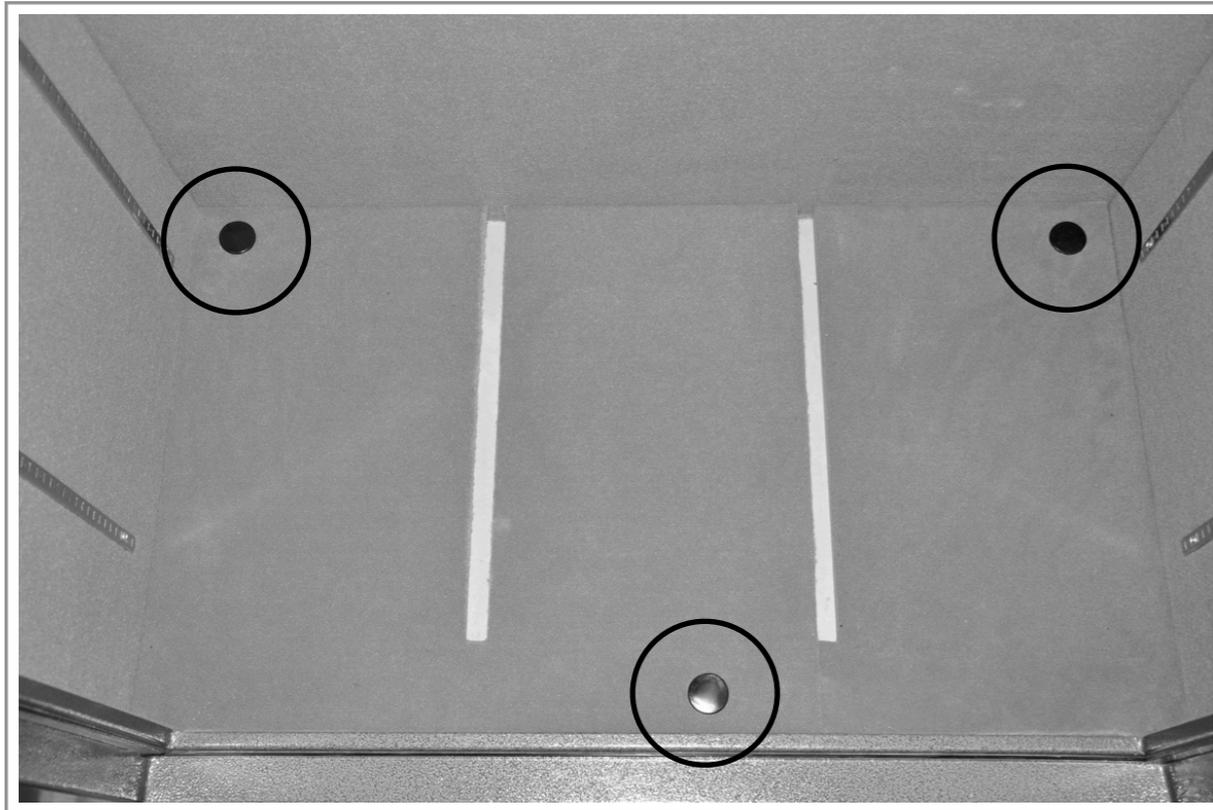

Step 2

Using a 9/16 wrench with an extension attached, remove all 3 lag screws.



ATTENTION !!

The following is BEST performed with several individuals and is ONLY a suggested method.

Granite Security Products will not be liable for any accidents, damages or injury that may occur.

Step 1

CAREFULLY !!
Move the safe towards the back of the pallet.



Step 2

CAREFULLY !!
Tip the safe back, and let the bottom edge of the safe contact the floor.



Step 3

CAREFULLY !!
While the safe is tilted back, have another individual remove the pallet.



Step 4

CAREFULLY !!
Tip the safe onto the floor



Limited Lifetime Warranty

This safe made by Granite Security Products, Inc. (GSP) comes with a limited lifetime warranty, beginning on the purchase date against defects in materials and workmanship as well as damage from a burglary attack or fire. The mechanical or electronic lock is warranted against defects in materials and workmanship for a period of 1 year from the purchase date.

This non-transferable warranty applies to the original owner only, and proof of purchase is required to obtain service.

This warranty also provides a free replacement safe if the safe is damaged in a burglary attack or fire. Free replacement claims must be made in writing along with a timely police or fire department report. Photos of the damaged safe must accompany the replacement claim.

GSP may, at its discretion, repair or replace the damaged or defective safe on location. If it is damaged to the extent that it cannot be opened by normal means, then GSP, at their expense will have the safe opened by a skilled technician to retrieve the owner's belongings. If the safe is to be replaced, a comparable, current production model will be shipped freight collect to the owner. This warranty does not cover any cost to remove or install the safe.

This warranty does not cover neglect, misuse, or abuse. It also does not cover damage caused by tampering with or altering of any part of the product. It also does not cover consumables such as batteries for the electronic lock. The safe must not be housed in an enclosed swimming pool area. The safe is to be located in an area which is climate controlled and is to be installed as instructed in the Owners Manual.

Certain exclusions to this warranty are: safes used in a commercial or industrial environment, water damage of any kind, paint finish, and loss or damage of personal property inside the safe. This warranty also does not apply to safes located outside the continental United States.

GSP provides this warranty in place of all other warranties and assurances whether expressed or implied. GSP accepts no liability for incidental or consequential damage or loss by anyone as a result of using this safe.

To activate this warranty, please fill in the information below and send to:

Granite Security Products, Inc.
ATTN: Warranty Registration
4801 Esco Drive
Fort Worth, TX 76140

Name _____ Phone _____

Address _____

City State Zip _____

Serial No. _____ Date Purchased _____

EXTENDED WARRANTY COVERAGE

Your new safe comes with a limited lifetime warranty against defects in materials and workmanship. The mechanical or electronic lock is covered by a 1 year warranty against defects in materials and workmanship.

You can extend your warranty coverage for \$50.00 which will include the following coverage:

1. **EXTENDED LOCK COVERAGE:** 9 extra years coverage (10 years total) on the mechanical or electronic lock installed on your safe.
2. **FREE COMBINATION SEARCH:** If your combination is lost or misplaced, you will receive **FREE** combination searches for 10 years after purchase date.
Normal cost for a combination search is \$25.00

To acquire your extended warranty, simply fill out all the information below. Make sure to include the serial number of the safe. The serial number is located on the right front of the safe down by the ground and also on the back of the safe. You can pay by filling out the credit card information or sending a check/money order for the amount. Make sure to keep a copy for your records as well. Send the payment with the information below to the following address:

Granite Security Products, Inc.
Attn: Gun Safe Extended Warranty
4801 Esco Drive
Fort Worth, Texas 76140

All checks/money orders can be made payable to: Granite Security Products, Inc. If paying by credit card please fill out information below.

PLEASE CUT ALONG DOTTED LINE AND MAIL WITH YOUR PAYMENT TO:

Granite Security Products, 4801 Esco Drive, Fort Worth, Texas 76140

Name _____ Phone _____

Address _____

City State Zip _____

Serial No. _____ Date Purchased _____

Make all checks/money orders payable to Granite Security Products, Inc. If paying by credit card fill out information below.

VISA MasterCard AMEX Cardholder Name _____

Card Number _____ Exp. Date _____

Signature _____