

DEFENDER[®]

STOP THE THREAT[®]

by Winchester[®] Safes

OWNER'S MANUAL



IMPORTANT - PLEASE READ FIRST



**PLEASE READ THIS MANUAL THOROUGHLY BEFORE ATTEMPTING TO SET UP YOUR NEW SAFE
THE INFORMATION PROVIDED IN THIS MANUAL IS IMPORTANT
AND MUST BE READ IN FULL AND FOLLOWED COMPLETELY FOR YOUR SAFETY.**



Model: D-RF-HS-9

Thank you for choosing Defender[®] by Winchester Safes to protect what's important to you. Your trust in us is not something we take lightly. If you have any questions or need help setting your safe up for the first time, we're here to help.

You can contact us directly at 877-9GUNSAFE between 7am-5pm CST Monday-Friday to talk to one of our skilled Customer Service team members.



TESTED SECURITY

This is a California-approved firearms safety device that meets the requirements of California Penal Code Section 12088 and the regulations issued thereunder.

This product has also been tested and certified to confirm to ASTM F2456, Youth Resistant Firearms Container.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WINCHESTER[®]

S A F E S

4801 Esco Drive Fort Worth, Texas 76140
877-9GUNSAFE | winchestersafes.com

D-RF-HS-9 0MV1 2017

Defender[®], Stop The Threat[®], Winchester[®] and the Winchester[®] Horse and Rider are registered trademarks of the Olin Corporation and are used with permission. Unless otherwise noted, all trademarks in this catalog are subject to trademark rights of Winchester Safes. ©Copyright 2017 Winchester Safes. For more information please visit www.winchestersafes.com. Winchester Safes reserves the right to change options, features and prices at any time.

**REGISTER YOUR NEW SAFE NOW TO RECEIVE OUR
LIMITED WARRANTY**

Easy Online Warranty Registration: winchestersafes.com/warranty

Fold out for mounting template



IMPORTANT - PLEASE READ FIRST

Warning: NEVER store a loaded firearm in the Defender® RFiD Handgun Safe under any circumstances. The risks associated with storage of a loaded firearm include, but are not limited to, unintentional discharge upon insertion or removal of the firearm. Unintentional discharge may result in the bullet and safe fragments dispersing in multiple directions, which may cause serious injury or death. Winchester Safes is not liable for the misuse of this safe.

Warning: No safe or lock box is entirely secure. The RFiD Handgun Safe is only as secure as your maintenance of the keys, code and RFiD tags. You are solely responsible for maintaining your keys, code and RFiD tags. Keep your keys and RFiD tags in a secure location at all times. Store your safe in a safe location away from your keys and RFiD tags. Winchester Safes is not liable for unauthorized access, including damage to, or loss of property, or personal injury. Again, **NEVER** store a loaded firearm in the Defender® RFiD Handgun Safe under any circumstances as this may result in unauthorized access to the loaded firearm.

Warning: Except as expressly provided in the RFiD Handgun Safe Limited Warranty, Winchester Safes is not liable for any expense or damage associated with your inability to open the RFiD Handgun Safe. Electronic systems may fail. Verify that the keys furnished operate the lock prior to use. Keep your keys in a secure location at all times. For your security, Winchester Safes **WILL NOT** send replacement keys.

Warning: Winchester Safes is not liable for any loss, theft or damage to personal property. The RFiD Handgun Safe is not intended to protect the contents from fire, water, humidity or other environmental conditions. Do not, under any circumstances, return this safe to Winchester Safes with any personal property inside.

IMPORTANT INFORMATION

RFiD Tag refers to the chip in any of the RFiD “keys” included with the RFiD Safe (key fob, stickers, RFiD card). You may also purchase additional RFiD tags.

For trouble-free operation of your new RFiD Handgun Safe, please read and understand all instructions before use.

Questions? Call Winchester Safes at 877-9GUNSAFE to speak with Customer Service.

Never store loaded firearms in the RFiD Handgun Safe. Follow local laws for firearm storage.

Prior to mounting the safe, record its serial number for future reference.

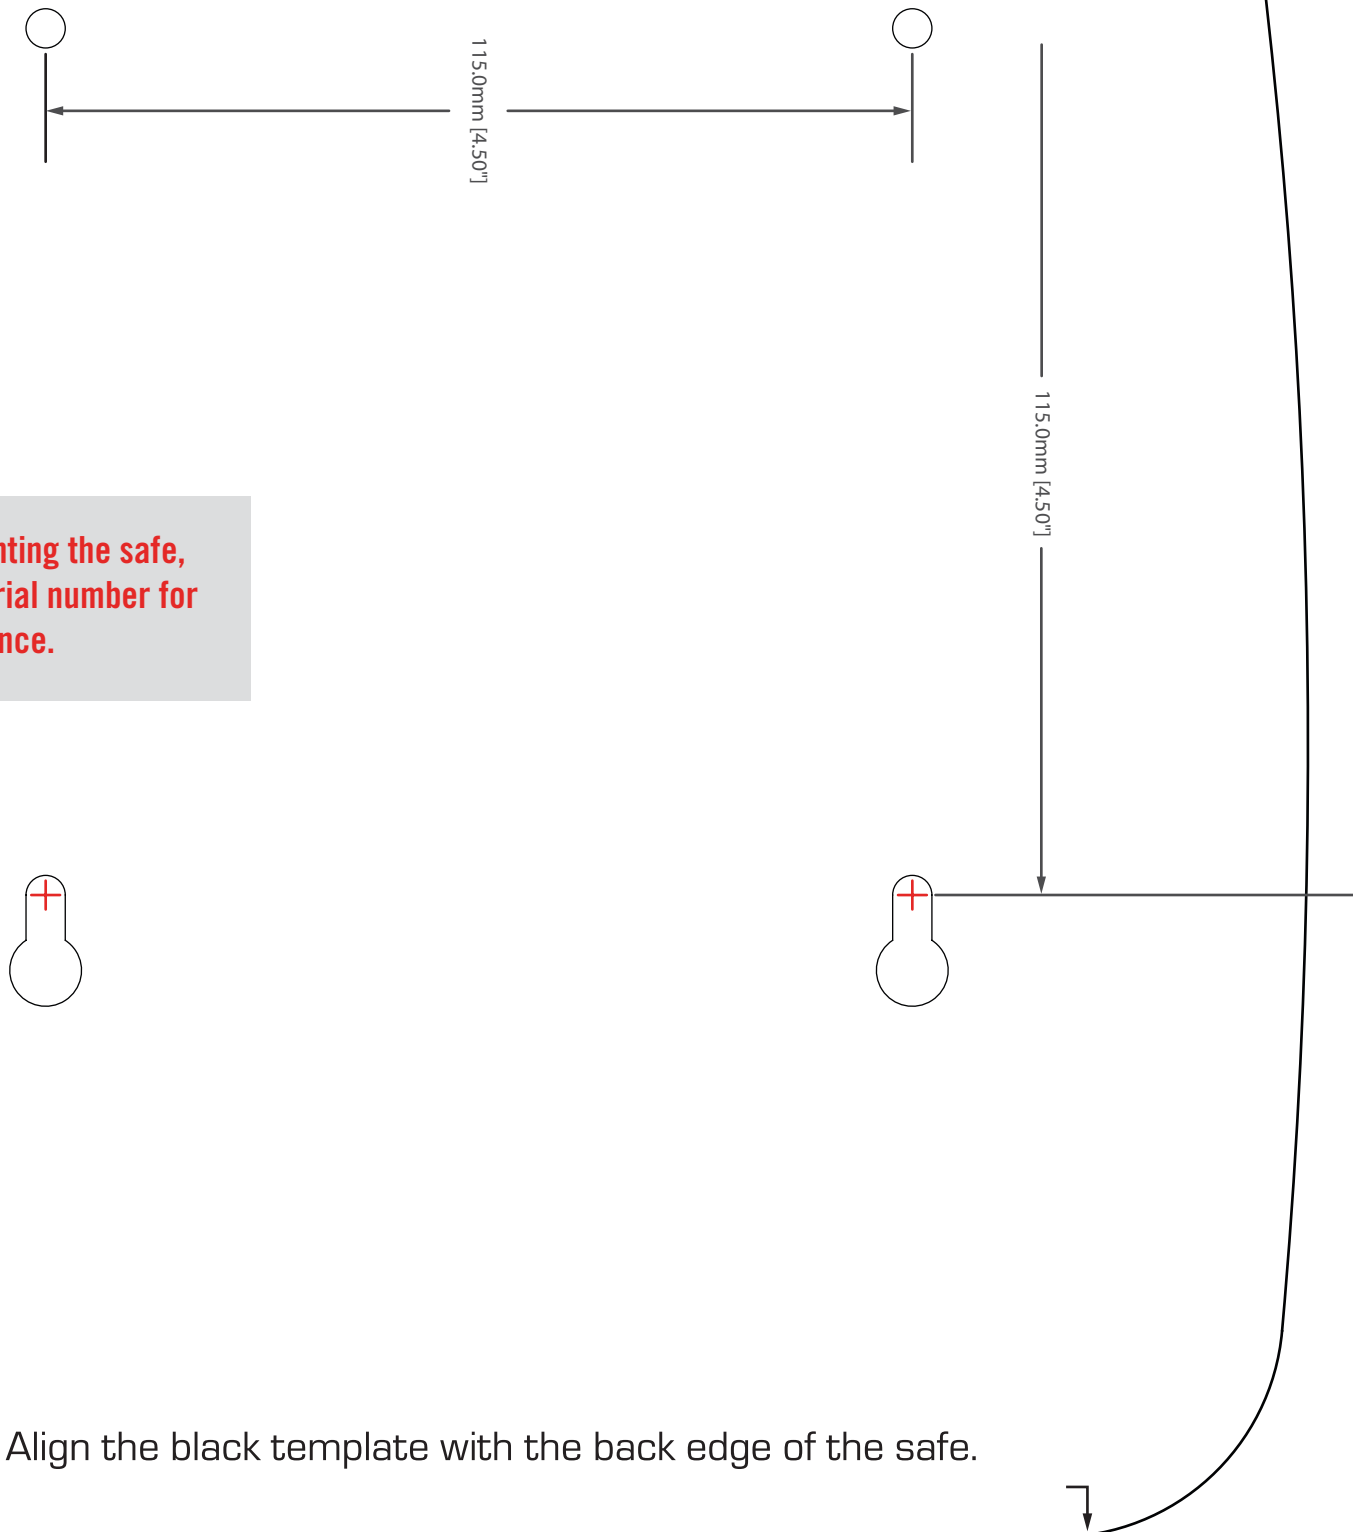


TABLE OF CONTENTS

Warnings & Important Information	2
Items Included	3
Setup & Operation	4
Warranty	9
Product Registration & Service	10
Frequently Asked Questions	10
Mounting Template	11

Items Included

1. Defender® RFID Handgun Safe
2. Wall Power Supply
3. Security Cable
4. Two (2) RFID Adhesive Decals
5. One (1) RFID Key Fob Tag
6. Two (2) Circular Barrel Keys



Not Pictured:

- Owner's Manual
- Warranty Card

Model: D-RF-HS-9

Exterior Dimensions: 12.7" x 8.7" x 2.9"

Interior Dimensions: 9.0" x 7.7" x 2.2"

Power: 12 V 1.0A or four (4) AA batteries

(batteries not included)

Defender® RFiD Handgun Safe Setup and Operation

Congratulations on purchasing the technologically advanced Defender® RFiD Handgun Safe. You have taken a significant step in securing the safety of your handgun. To achieve the best experience with your Defender® RFiD Handgun Safe, please read all instructions carefully, and understand its operation.



After the Defender® RFiD Handgun Safe has been taken out of the box, please check to be sure both circular barrel keys fit and unlock your Defender® RFiD Handgun Safe. Contact Winchester® Safes at 877-9GUNSAFE if the keys do not work. Store keys in a secure location outside the safe.

AC Power

The Defender® RFiD Handgun Safe is designed to be powered by either the AC power supply or four AA batteries. To connect the AC power supply, first open the safe with the circular key, and then press in the lid's stop catches to fully extend the lid for easy access. Remove the foam from the lower compartment, and insert the power jack through the square hole in the bottom of the safe. With the battery door closed, plug the AC power supply into the back of the front panel. The cord should be routed to the left side of the safe before reinserting the foam.

Batteries

For backup or mobile use, your safe requires four AA batteries (not included). To install batteries, remove inner foam from base and verify AC adapter is unplugged. Press down on the two lock tabs and rotate door forward on the battery compartment. Only use new high quality AA batteries. Replace all batteries at the same time.

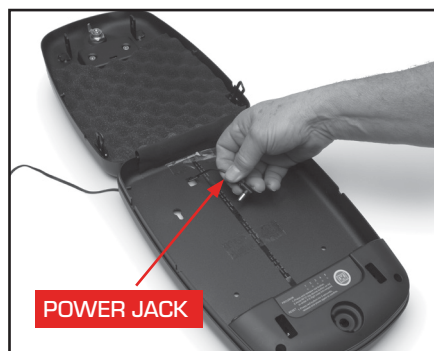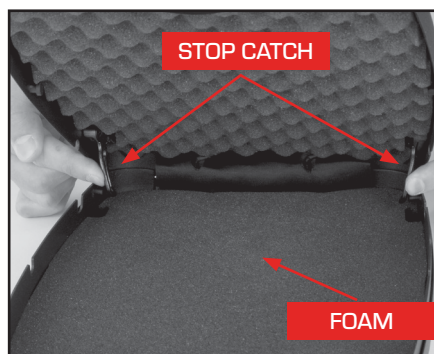

To check battery level:

1. Disconnect from AC power source.
2. Press and release logo button on the lid.
3. The LED light around the logo button will flash.
 - a. Flashing Green – Good battery
 - b. Flashing Yellow – Low battery
 - c. Flashing Red – Dead battery
4. After 10 seconds the safe will return to normal operation.

NOTE: Replace batteries every twelve (12) months or if they become weak. The most common reason for a “lock-out” is a dead battery and this will be the first option explored by Customer Service.

Battery Power Mode

When the Defender® RFiD Handgun Safe is unplugged, and is operating on battery power, **you must press any button on the lid to activate the reader.** Pressing **any button** on the lid causes the system to go from battery saving mode to ready status.

For example: To open your safe with an RFiD tag, while the system is running on battery power, first press any **button on the lid** to bring it to ready status. Place your RFiD tag within 1” of the center of the RFiD reader to open the safe.

Keypad Tones On/Off

Press and hold the center logo button on the keypad for 5 seconds until the light turns off to toggle sound on and off.



ATTENTION!

When the Defender® RFiD Handgun Safe is unplugged, and is operating on battery power, **you must press any button on the lid to activate the reader.**

Pressing **any button** on the lid causes the system to go from battery saving mode to ready status.

How to Program Your RFiD Tags

Your RFiD Handgun Safe includes three (3) styles of RFiD tags, including:

- 1 Card
- 1 Key Fob
- 2 Decals*

**Additional decals can be purchased separately.*

The Defender® RFiD Handgun Safe can store up to 5 tags.

To program these tags:

1. Open the safe with either the key or a previously programmed RFiD tag or key code. (The key code safe does not ship with pre-programmed RFiD tags. An RFiD tag must be programmed to work with this safe.)
2. Locate the red program button. Press and release the button to begin programming a RFiD tag. The first available program location will begin to blink.
3. **Hold the RFiD tag within 1”** of the illuminated RFiD reader area on the top of the safe lid. If the programming was successful, the safe should beep two times and the available slot should go from blinking to solid red for approximately ten seconds.

NOTE: If you attempt to program an RFiD tag that is already stored into the safe, the safe will beep three times and the RFiD tag will not be programmed into the duplicate slot. The RFiD tag can only be programmed into one location.



UP TO 5 RFID TAGS CAN BE PROGRAMMED INTO YOUR SAFE AT ONCE.

4. Verify the RFID tag is programmed by holding the tag over the RFID reader with the lid open. The motor should cycle after each scan.
5. If the RFID tag does not program into the safe, the program function will time out after ten seconds and the safe will return to normal operation. If multiple attempts to program an RFID tag fails, please contact Winchester Safes at 877-9GUNSAFE
6. One to five RFID tags can be programmed into the safe.



How to Program Your Key Code

A single 4 to 6 digit code can be entered into the Defender® RFID Handgun Safe.

1. Open the safe with either the key or a previously programmed RFID tag or key code. The safe ships with a default code (1-2-3-4-logo button) and should be reprogrammed before first use.
2. Press the red program button to begin programming your key code. The first available tag location will begin to blink to indicate program mode.
3. With the lid open, enter a 4 to 6 digit code into the keypad on the lid. Press the center logo button after entering your code. Verify your code is correct by re-entering your code and pressing the center logo. The motor should cycle.
4. Your key code can now be used to open the safe.

NOTE: Only one key code can be entered into the safe. If a second code is entered, it will override the previous code. **A total of 5 RFID tags and 1 key code can be entered into the safe.

How to remove all tags from safe:

1. Open the safe with either the key or a previously programmed RfID tag or key code. Locate the red program button. Press and hold the button for five seconds to erase all tags from the safe. All five red LEDs will begin to blink in sequence. (The safe does not allow individual tags to be removed. They must all be erased at one time. The intended RfID tags can then be reprogrammed back into the safe with the instructions on previous pages.)

NOTE: To abort the erase procedure, press the center logo button on the lid of the safe, or do not touch anything, and the erase procedure will automatically abort after 10 seconds and return to normal operation. Test RfID tags and the key code to confirm they are operational.

2. To confirm erasing procedure, press and release the program button again. All five LEDs will blink three times to visually confirm all RfID tags have been removed. All RfID tags will no longer work until they are programmed back into the safe with the instructions in the “How to Program Your RfID Tags” section.

Closing the Safe

The safe has a latch closure sensor that will illuminate the LED in the keypad when the lid is closed.


Green – Latch has fully closed.

Blinking Red – Latch has NOT fully closed.

Press lid down to fully close or re-open and check for interference.

Security Cable

This safe includes a security cable that can be looped around a stationary object. With the safe lid open, feed the lug end through the loop end and place the lug end of the cable into the security cable slot and close the lid.

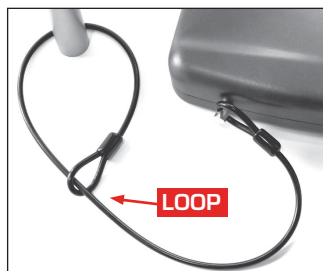

Defender® RFiD Handgun Safe Limited Warranty

Defender® by Winchester Safes warrants the RFiD Handgun Safe will, in normal use and service, be free from defects in workmanship or other materials for one (1) year from the date of purchase.

This Limited Warranty does **not** cover any of the following:

- (a) Damage, deterioration or malfunction resulting from accident, negligence, misuse, improper installation or lack of maintenance;
- (b) Any defects not discovered and reported to Winchester Safes during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Winchester Safes receives notice from the original purchaser of a warranty claim in conformity herewith, Winchester Safes will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Winchester Safes will, in its sole discretion, repair the defect(s) or replace the RFiD Handgun Safe at the expense of Winchester Safes.

DISCLAIMER OR IMPLIED WARRANTIES

EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, WINCHESTER SAFES MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE RFiD HANDGUN SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

LIMITATION ON LIABILITIES

THE OBLIGATION OF WINCHESTER SAFES TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE RFiD HANDGUN SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF WINCHESTER SAFES TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS.

LIMITATIONS ON THE NATURE OF DAMAGES

WINCHESTER SAFES SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. WINCHESTER SAFES IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE RFiD SAFE, OR ITS CONTENTS.

Product Registration and Service

You must register your RFID Handgun Safe in order to obtain Warranty Service. Simply submit through our website at winchestersafes.com/warranty or complete and return the enclosed product registration card with proper postage.

To Receive Warranty Service

In order to report a warranty claim, call Winchester Safes at 877-9GUNSAFE to request a return authorization number. Returns will not be accepted without prior return authorization by Winchester Safes. When a return authorization number has been obtained, be sure all contents have been removed from the safe before sending it for service. Winchester Safes is not liable for any loss, theft or damage to personal property.

Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Winchester Safes at 877-9GUNSAFE for options.

FREQUENTLY ASKED QUESTIONS

I've lost my keys. Can I get a replacement?

For security reasons, Winchester Safes **WILL NOT** provide replacement circular barrel keys for the RFID Handgun Safe. Consult a locksmith to explore options.

How do I return my Defender® RFID Handgun Safe for warranty work?

Call Winchester Safes at 877-9GUNSAFE to speak with Customer Service

Where can I find the serial number?

The serial number is located on the bottom of the safe. Prior to mounting the safe, record the serial number for future reference.

Why isn't my RFID card, key fob or decal opening the safe?

Be sure the RFID tag is programmed to your safe. This safe allows five (5) RFID tags to be programmed at once. Check the power source. If the unit is plugged into an electronic outlet, the green LED light should be on. If the unit is on battery power, press the center logo button on top of the safe to bring the system to ready status before placing the RFID tag on the reader.

Defender® Keylock Handgun Safe

Model Number: D-RF-HS-9