

Opening the safe (first time)

Insert the main operating key into the key cylinder located on the left side of the key pad. Remove the override key cover located on the right side of the keypad. Insert the override key and turn to the left, then rotate the main key to the right to open the door.

Installing the batteries

Insert the main operating key into the key cylinder located on the left side of the key pad. Remove the override key cover located on the right side of the keypad. Insert the override key and turn to the left, then rotate the main key to the right to open the door. With the door open, install the batteries provided (4 AA batteries).

Opening the safe door (first time) (FACTORY CODE IS SET TO 1 - 2 - 3 - 4 - 5 - 6)

With the batteries installed, insert the main key into the key cylinder. Input the FACTORY CODE of 1-2-3-4-5-6 and press the "#" key. Immediately rotate the main key to the right and open the door.

Changing the code

Open the safe door, press and hold the red button until the yellow light comes on. Input your new code (must be 6 numbers), then press "#" button. The correct procedure will be confirmed by two beeps, indicating the code has been changed and stored. However, if the yellow light flashes three times, the procedure was done incorrectly and should be done over.

Low Battery

When the batteries are low, the red and green light will flash simultaneously, thus indicating its time to change the batteries. To insure that the batteries are installed correctly, re-set and test your code with the door open several times.

NOTE: DO NOT STORE THE OVERRIDE KEY INSIDE THE SAFE.